



**MOUNTING INSTRUCTIONS FOR TECHNIQ  
FLUSH PROJECTOR MOUNT FOR EPSON  
PROJECTORS**

**INSTRUCTIONS FOR  
MODELS:**

HTPMEP0001B (NO COVER)  
HTPMEP0001W  
HTPMEP6000BK/WH  
HTPMEP9000BK/WH

21.02.2012-01

- Read these instructions carefully before installing your equipment.
- Install the mount in a suitable location using fixings which are appropriate for the ceiling material and structure (these are not included).
- Consult a qualified builder if you are in any doubt as to the structural integrity of the ceiling.
- Do not attempt to alter or modify any part of the projector mount or its attachments.
- Do not use if any parts are broken or appear to be damaged.
- Tighten all bolts and fixings securely. Only use fixings provided with this bracket.
- Do not mount your projector near to sources of heat or moisture.
- Always have a minimum of two persons to install the projector and the mount.

**TV Fixing Kit**



A - M4 x 10mm

x5



B - M5 x 25mm (pre-assembled)

 
x2



C - M5 x 12mm (pre-assembled)

x2

**Also required**



**1**


**Mount Bracket To Ceiling**

**NOTE:**

Use fixings suitable to your type of ceiling construction.  
These are not included.



Use all available fixing points.

If in any doubt as to the suitability of the ceiling, its construction  
or what type of fixings to use, consult a qualified builder.

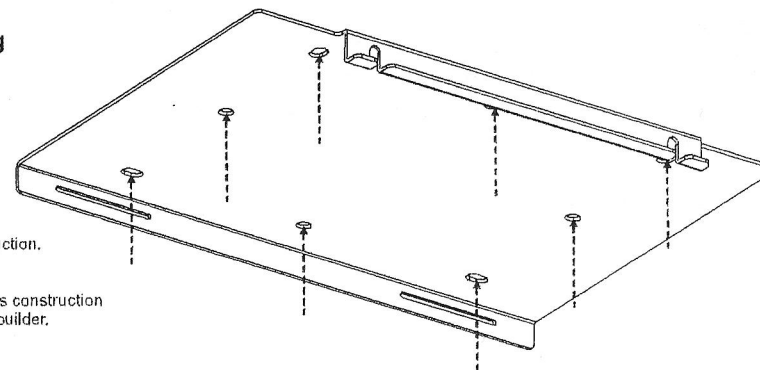

**2**

**Mount Bracket To Projector**

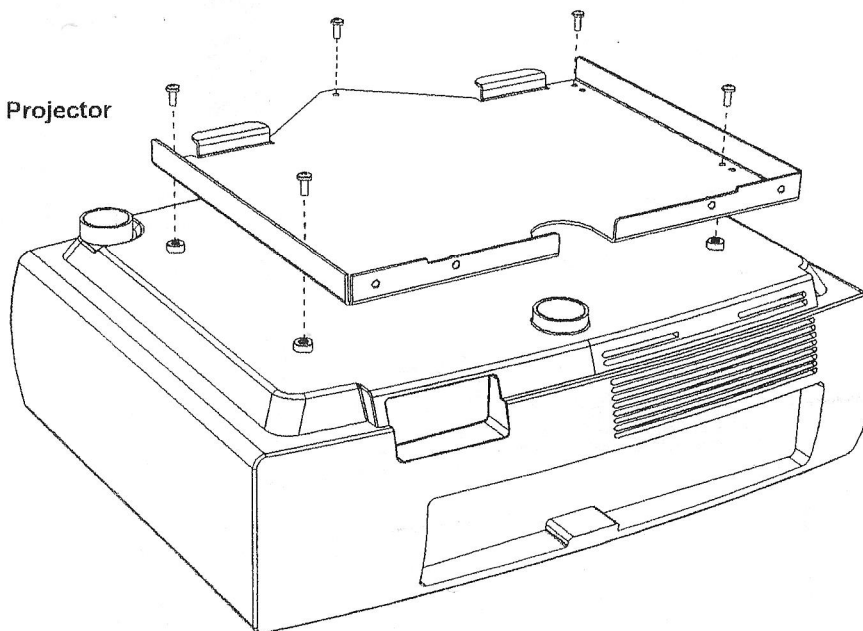
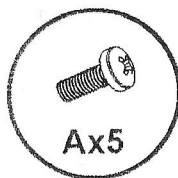


# 3

## Preparation to attach to ceiling plate & attaching cable cover to projector

Using a pozi-drive screw driver, unwind 2x screws **B** so that 10mm of thread is visible

Unwind 2x screws **C** so that 3mm of thread is visible. This will allow you to insert or remove the cable cover.  
Tighten screws **C** when cable cover is in position to secure.

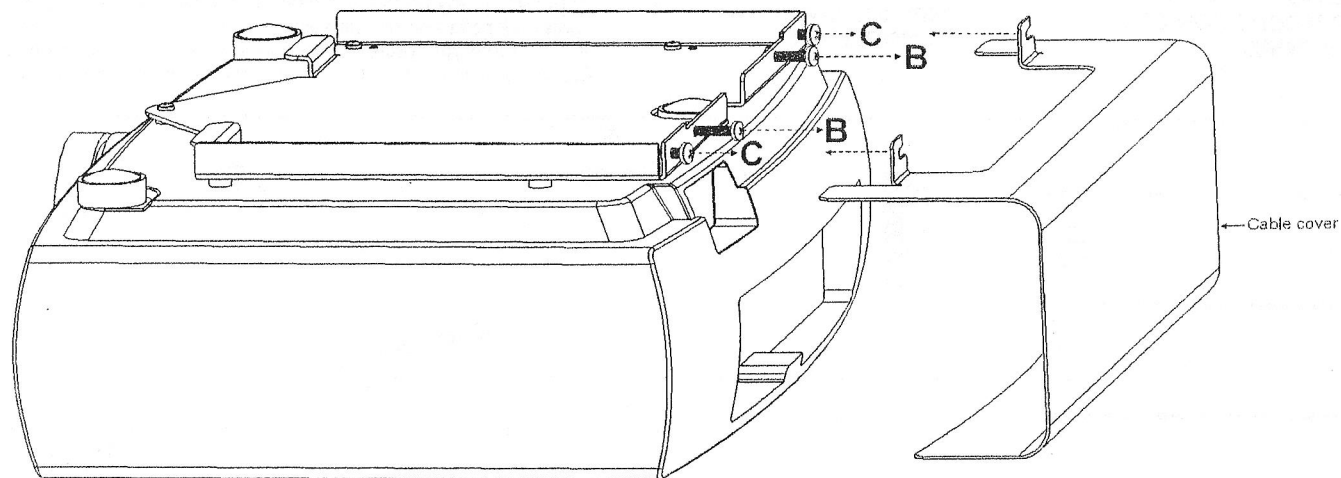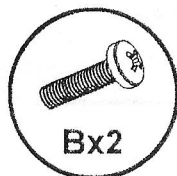


# 4

## Attach Projector to ceiling mount

**A**  
Insert the forward facing tabs into the front mounted slots of the ceiling plate

**B**  
Move the back of the projector upwards placing screws **B** between the rear facing slots on the ceiling plate.  
Hold the projector in position moving on to stage 5

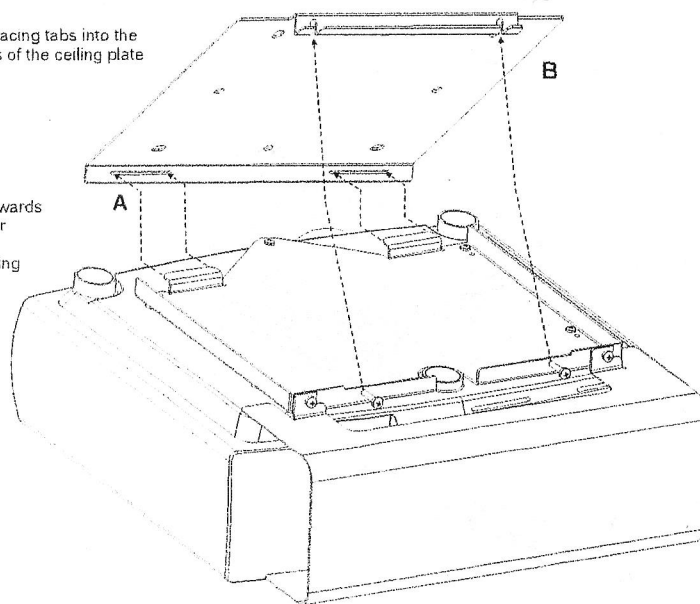

# 5

## Secure projector mount together

Fully insert and tighten **B** (M5 x 25mm machine screws)

